

143x208mm



**BRIKK™**

## **TWIN-TUB WASHING MACHINE**

MODEL NO: BDWPD7506 / BDWPD1007


## **USER MANUAL**

PLEASE READ THIS MANUAL CAREFULLY BEFORE OPERATING THE MACHINE.



## INTRODUCTION OF PARTS

- |                                 |                        |
|---------------------------------|------------------------|
| 1. Wash Inlet                   | 12. Pulsator           |
| 2. Wash Timer                   | 13. Cabinet            |
| 3. Hanging hook                 | 14. Spin-Dry Inner Lid |
| 4. Wash Lid                     | 15. Spin-Dry Basket    |
| 5. Selector Switch (Wash/Drain) | 16. Outer shell        |
| 6. Spin Timer                   | 17. Machine stand      |
| 7. Control Panel                | 18. Back Cover         |
| 8. Drain Hose                   | 19. Ground Wire        |
| 9. Spin-Dry Lid                 | 20. Cable and Plug     |
| 10. Overflow filter             | 21. Water Inlet Hose   |
| 11. Filter box                  | 22. Safety Cover       |

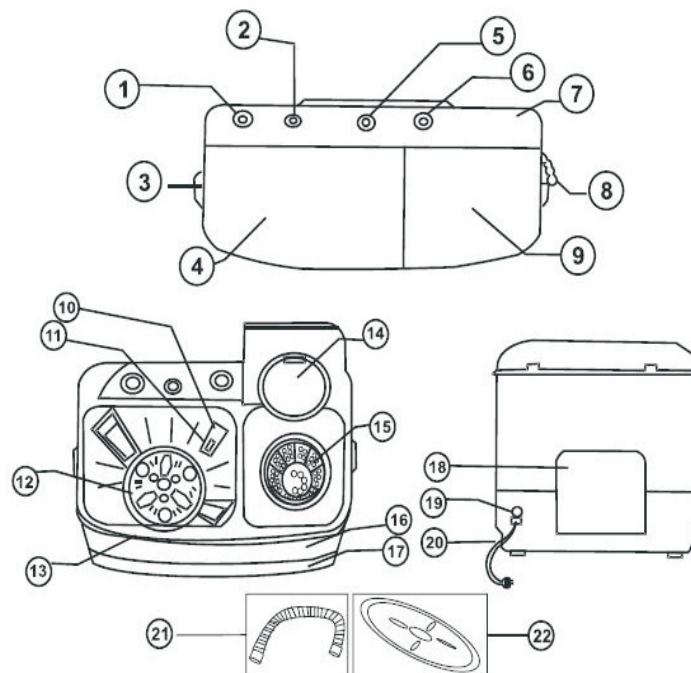

Note: Your machine may slightly differ from the above illustration.

## SPECIFICATIONS

MODEL	BDWPD7506	BDWPD1007
MAX. RATED WASHING CAPACITY	7.5 kg	10 Kg
MAX. RATED SPINNING CAPACITY	3.0 kg	7.0 Kg
POWER SUPPLY	230V a.c.	230V a.c.
WASHING INPUT	300W	450W
SPINNING INPUT	140W	235W
NET DIMENSION IN MM	760x440x880mm	860x495x950mm

In view of Brikk's policy of continuous development, these features, specifications and colors are subject to change without prior notice.

## SAFETY PRECAUTIONS

1. Make sure that the washing machine is plugged into a two pin electrical outlet.
2. Unplug the power supply cord when you do not use it.
3. To disconnect the washing machine from the electrical mains completely, pull out the plug and do not pull it from the mains cord.
4. Don't allow your kids to look inside the washing machine while running.
5. This washing machine is meant for washing clothes with water as a medium. Do not use petrol or other chemicals. This can result in fire and damage.
6. Do not use water with temperature exceeding 50°C, as this deforms the plastic parts in the machine. If you desire to use warm water add hot water to cold water in the wash tub. Do not pour hot water in an empty tub.
7. Keep the machine away from flames and inflammable material. Do not expose the washing machine to direct sunlight or rain. Also avoid placing it on humid locations.
8. Take precautions not to pierce the control panel membrane sheet.
9. Do not connect the earth wire to the phone wire, lightning rod.
10. Do not press the button with an awl or pin.



product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electric and electronic appliances.

This



*This appliance is not intended for use by persons including children (with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Do not put hands in the tub when it is working. The power cord of the washer is connected by Y shape. It must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid any hazards.*

**This appliance is intended to be used in household and similar application areas in shops, offices and other working environments.  
Farm houses by clients in hotel, motels and other residential type environments.**

## INSTALLATION


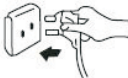
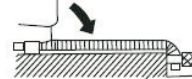

- ✓ Washing machine should be installed on a firm and smooth ground.
- ✓ Put the washing machine approximately 5cm away from the wall to avoid noise.



## CONNECTING THE PIPES

- ✓ Connect the pipe correctly by attaching the affusion spigot into the affusion hole.







 <p>Connect the Intake pipe with the water spigot</p>	 <p>Nut the wire into the plug</p>
 <p>Put down the drain pipe</p>	 <p>Put the Garments into the washing tube then put into the wash powder</p>

## GUIDELINES


1. Water Inlet : There are 2 water inlet holes on the back side of the panel, one for wash tub and the other for spin tub.
2. Wash Timer : This timer is used for washing or rinsing.
3. Wash Selector : Set the knob to 'GENTLE' or 'NORMAL' according to kinds and quantity of the laundry. Or 'DRAIN' the water from the wash tub.
4. Spin Timer : This is used to spin time between 1-15 minutes.

Note:

1. Do not rotate knobs more than prescribed limits.
2. Above graphics is just for representation, it may not exactly match your machine.

	<p>1. Remove coins, nails or other sharp objects from the garments</p>		<p>2. Never put the garments with chemical reagents together with clothes</p>
	<p>3. Turn clothes inside out the garments to prevent frays</p>		<p>4. Put the delicate garments into the pocket during washing</p>

#### OPERATING PROCEDURE

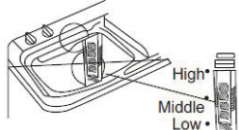 
	<ol style="list-style-type: none"> <li>1. Choose the water level according to the quantity of the garments, high, middle or low</li> <li>2. For the water level of the double water stream, it's the best position of the middle and high</li> </ol>
---	--

#### RINSE

There are 3 ways to rinse:

1. Soak Rinse: Fill the wash tub appropriately for the number of clothing being washed. Set the washer timer for 35 minutes. Soak/rinse will begin and it will continue to do so for a period of 20 minutes.
2. After 20 minutes, the machine will switch to wash function and clothes will be washed for another 15 minutes. It will automatically stop.
3. Intermediate Spin Rinse : Put clothes inside the spin tub. Set water supply selected to SPIN TUB. Open the water tap and keep it open for several minutes and then close tap. Spin for a minute. When rinsing is over, set the drain selector to DRAIN. Do not keep the water tap open when spin tub is rotating or else machine will malfunction.

#### SPIN

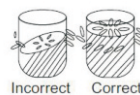

Put clothes inside spin drum. Distributing them evenly and ensure that the drain hose is lowered otherwise, the machine will malfunction. After putting the clothes inside the spin drum, place the spin drum cap over the clothes to prevent them from flying out. Close the spin drum lid. If the spin drum lid is not closed, the spin drum will not rotate. Set the spin timer from 1 to 5

minutes according to the type of clothing inside. If spin drum starts shaking, open the spin drum lid, wait for the spin drum to stop spinning and even out clothing and restart.

#### GUIDE FOR WASHING

Type of Fabric	Wash Time	Amount of Laundry	Water Level	Amount of water	Amount of detergent
Synthetic, Silk, Wool, Knits	3-6 mins	0.5-2.0 kg	1	20L	30g
		2.0-4.0 kg	2	35L	45g
		4.0-6.0 kg	3	50L	60g
Cotton, Linen	6-9 mins	0.5-2.0 kg	1	20L	30g
		2.0-4.0 kg	2	35L	45g
		4.0-6.0 kg	3	50L	60g
Very soiled	12-15 mins	0.5-2.0 kg	1	20L	30g
		2.0-4.0 kg	2	35L	45g
		4.0-6.0 kg	3	50L	60g

- If wash load and water volume do not match, clothes may be damaged or water splash may occur.
- The quantity of wash load varies depending on fabric type, thickness and size of the clothes.
- Adjust water level/wash load as required by carefully watching the movement of the clothes in the tub.

Type of Garment	Drying time
Shirt (synthetic fibre)	1-2 minutes
Underwear	3-5 minutes
Work clothes	5 minutes

#### USAGE INSTRUCTIONS

##### FIRST WASHING:

1. Select the wash option on the selector switch.
2. Soak/Wash: Put clothes in the wash tub with water and detergent. Start the soak/rinse function.
3. For the 1<sup>st</sup> 20 minutes, soak/rinse will work and after that clothes will be washed for the next 15 minutes

##### SPINNING:

1. Place the clothes in the spin tub.
2. Select spin timer for the time period required (5 minutes recommended). This will remove excess soap.

##### SECOND WASH/RINSING:

1. Transfer clothes to wash tub.
2. Rinsing: fill in water only and select wash time of 3-4 minutes
3. After this is complete, select the drain mode to drain out water.

##### SECOND SPINNING:

1. Transfer clothes to spin tub and select spin time to complete final drying process.

### CLEANING THE FILTER

Please clean the filter after finish working every time



Pull down the filter and press down as the picture



Clean the filtrate netting into the water



Fit it into the hole and press it

### TROUBLE SHOOTING GUIDELINES

Motor not working	Is the power cord firmly plugged in?
	Is the timer turned to a position except off?
	Motor has a thermal overload protector that prevents the motor from burning due to overheating. In such a case, you may let the motor cool down by letting it rest for 30 minutes and restart it again to see if it functions normally.
Spin dryer basket does not operate	Is there any clothes that was dropped between the tub and the basket?
	Is the spin dryer cover closed?
	Is the laundry gathered to one side of the spin dryer causing unevenness?
Drain not draining	Is lint stuck to the plunger valve?
	Is the end of the drain hose lowered?



# **WARNING!**

Do not expose the washing machine to a direct sun light or rain.



Let water drain away from the drain hose thoroughly



Keep the washing machine away from fire or heat source



Do not install the washing machine around a damp place.



When Plugging out the power cord, do not hold the wire



Do not wipe the washer with the volatile material, gasoline, etc.



Do not sprinkle water over switches



Keep children away from The washing machine



Do not pour over 50 C° water in to the tub









**BRIKK™**

Imported and Distributed by:  
Carian Philippines Inc.  
1311 Penafrancia Street, Paco,  
Manila, Philippines