


**sinbo**

**SFH 3308  
ELEKTRİKLİ ISITICI  
INFRARED HEATER**

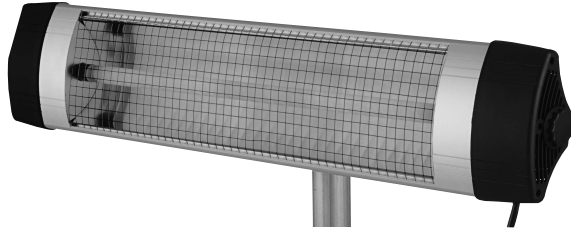

**0212  
444  
66  
86**

**TÜKETİCİ  
DANIŞMA  
HATTI**

[www.sinbo.com.tr](http://www.sinbo.com.tr)

for Turkey

**KULLANIM KILAVUZU  
INSTRUCTION MANUAL**

## INTRODUCTION


• Before putting into operation read all instruction carefully and keep the instructions in a safe place for future reference.

## IMPORTANT SAFEGUARDS

To avoid deflagrating danger, electrical accidents and other injuries, Read carefully and apply the instructions below .

1. Before usage you must read the instructions.
2. Never turn on your heater in vertical position.
3. Do not use your heater without leaving at least 2 m optimal distance from objects like curtains, flammable surfaces.
4. Do not insert objects like paper, sheets, pencil, etc.. while the heater is on.
5. Do not use the heaters filament to light your cigarattes.
6. Do not use this heater as a cloth dryer tool your cloth may burn.
7. Do not put any cover over the heater
8. Check the electrical system security. Your fuse must be 16 A type.
9. Check suitability of the socket which you plug your heater in. Do not plug another electrical device to this socket use only for your heater.
10. While not working unplug your infrared heater.
11. Only obey these instructions. Otherwise It would cause fire, electrical shock, other injuries and excludes from guarantee conditions.

## PRODUCT DESCRIPTION

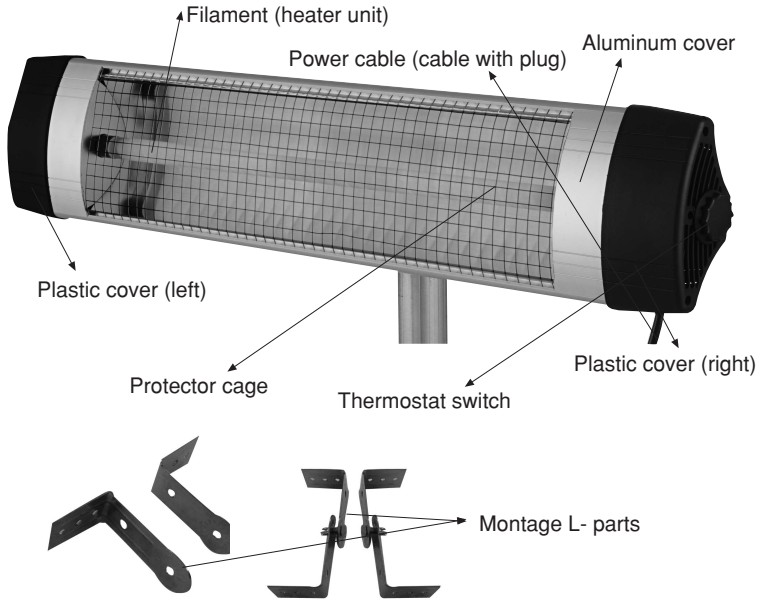

## HOW TO USE AND CARE

1. Warms up economically and healthily
2. It's like sunlight
3. Saves about 80% energy comparing other heating means.
4. Room temperature can be automatically adjusted by thermostat
5. Heater can be easily mounted to the wall and ceiling or can be used with a portabele stand

## ATTACHING TO THE WALL

1. Infrared Heater must be mounted on consolidated concrete, stone and metal surfaces.

Do not mount on flammable surfaces.

2. Fasten the "L" shaped part on mid part of the heater's aluminum canals by fixing the nuts in the canal with M5 bolt. (Leave 50 mm space between)

3. Mount the other "L" parts (using pegs) to the consolidated surface( wall,ceiling,etc..) they must be parallel to the floor.

4. Now fasten the "L" parts to each oyer ( 2 behind heater and 2 attached to the wall) by using butterfly shaped bolts. Now you can use your heater at any angle you preferred.

## PERFORMANCE PARAMETERS

<b>Voltage</b>	: 230 V
<b>Frequency</b>	: 50 Hz
<b>Power</b>	: 2500 W
<b>Size</b>	: Y: 170 , G: 95, B: 870 (mm)
<b>Weight</b>	: 1.350 kg
<b>Effective heating</b>	: 25 m2



## **CLEANING AND MAINTENANCE**

Clean your heater properly.

1. Plug out your heater.
2. Take out the protector cage.
3. Use a soft cloth to clean the concave mirror.